RadioShack

2.4 GHz Cordless Telephone with Caller ID

43-3557/43-3558

Quick Start Guide

for installing, setting up and using your new product

Install and Charge the Handset Battery

1. Press and slide down to remove the handset's battery cover.

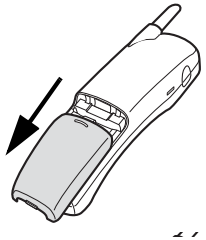

2. Plug the battery pack's connector into the socket in the battery compartment (fits only one way).

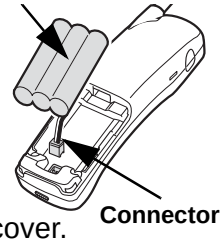

3. Replace the handset's cover.

4. Insert the AC adapter's barrel plug into the base's **DC IN 9V** jack on the back of the base, and route the excess cord through the strain relief slot. Plug the adapter into a wall outlet.

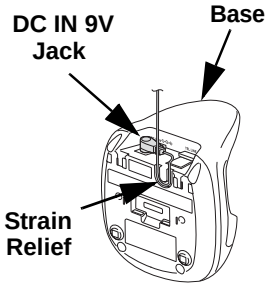

5. Place the handset in the base and charge continuously for 15-20 hours before using the phone.

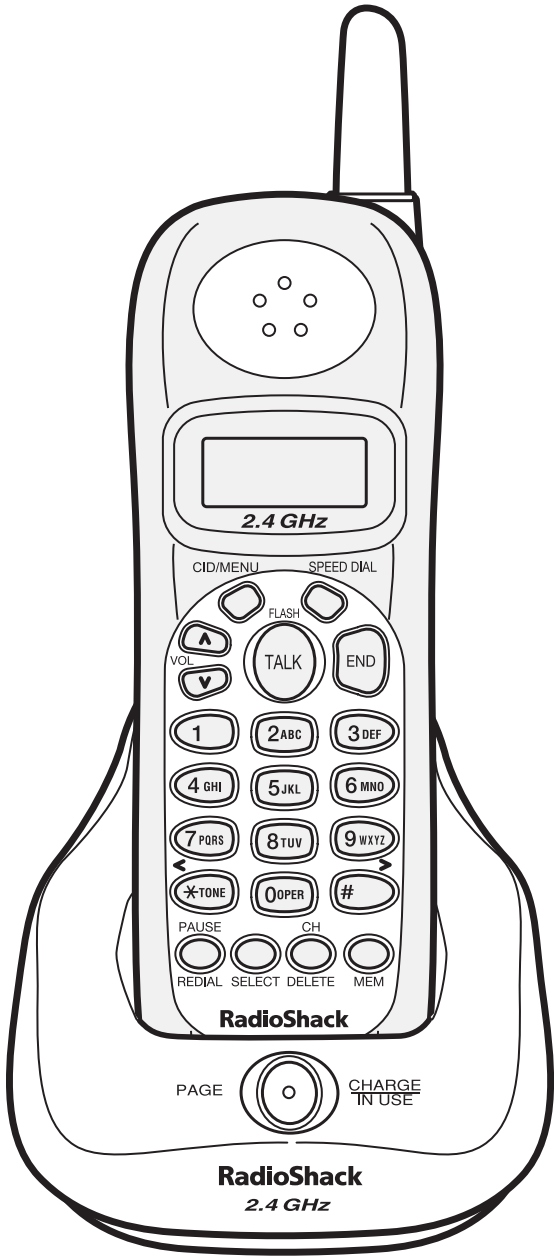

Using Your Phone

Connect to a Phone Line

When the handset battery pack is fully charged, plug the telephone cord into the **TEL LINE** jack on the back of the base. Plug the other end into a telephone wall jack.

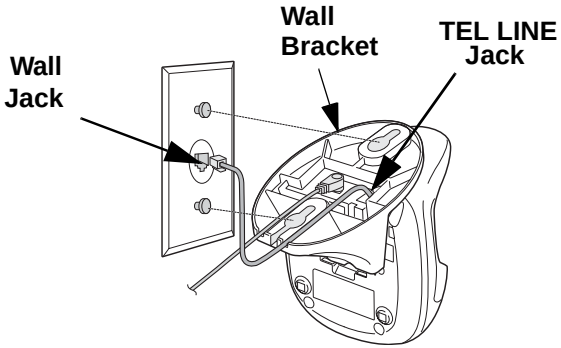

Note: The illustration shows the wall-mount bracket attached. See page 9 in your Owner's Manual for how to attach and use the bracket.

Your phone is set for tone dialing. If your local network requires pulse dialing, please see "Choosing the Dialing Mode" on page 18 in your owner's manual.

Making Calls

Pick up the handset and press **TALK/FLASH**. Listen for the dial tone, and then dial the number. Or, you can dial the number, and then press **TALK/FLASH**.

Answering Calls

If Auto Talk is on, pick up the handset from the base. If the handset is off the base, press **TALK/FLASH**, any number, ***/TONE**/< or **#**/>.

If *Auto Talk is off,* pick up the handset from the base and press **TALK/FLASH**.

For more information about Auto Talk, please see "Changing the Auto Talk and CIDCW" on page 17 in your owner's manual.

©2004 RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

43-3557/43-3558
Printed in China
01A04
UPZZ69040BZ